

LABEL DISPENSER

MODEL: SH-408



USER'S MANUAL
OPERATION, MAINTENANCE AND TROUBLE SHOOTING

Contents

A. External View-----	3
B. Specification-----	3
C. Label setting procedure-----	4
D. Trouble shooting-----	4
E. Parts list-----	5
F. Electric diagram-----	6

A. External view

- Check all parts
 - Main body
 - Hanger bracket
 - Hanger shaft
 - Hanger guide(pair)
 - U-pin
 - AC-Code
 - Manual




Instal hanger bracket if separated.

B. Specification

- Label size -Max 200(W) X 310(L)mm
 - Min 10(W) X 25(L)mm
- Label roll - Max 300mm
- Speed - 12m/min
- Power - 110VAC
- Motor - SPG S8125GX, Gear S8KA30B
- Timing belt - MITSUBISHI 144XL
- Sensor - SANIL(SB-11, BR-6M)
- Counter - Autonics(LA7N-FR)
- Machine dimension - 255(W) X 340(L) X 345(H)mm
- Net weight - 9.2Kgs
- Fuse - 3A

C. Label setting procedure

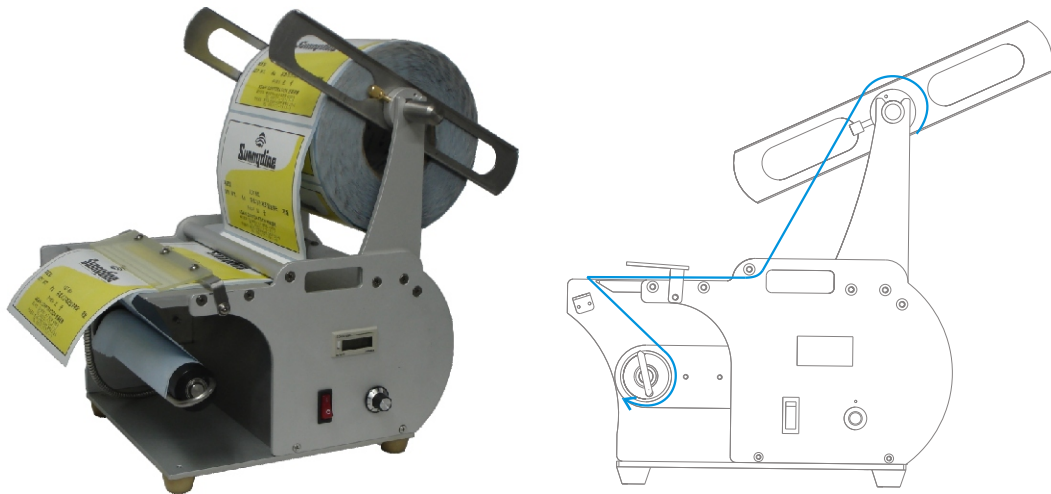

D. Trouble shooting

Trouble	Shooting
Machine does not start	Check if power cord is connected to the machine and power outlet. Check if the fuse is blown.(→ Means burn) Remove fuse and replace to new.
Label comes out continually	Check volume is too high. Please down the volume. Its better to start volume low.
Label comes out too slowly and not steadily	Check urethane press sheet too press → loose urethane press sheet.